GTOnline User Guide Version 5.0 - January 2021

Your complete guide to the GTOnline Web Portal

- Create/administrate Customers, Plant & Users
- Make inspection and uploade images
- View inspection analysis & reports

GreenTrapOnline (

www.greentraponline.dk



Contents

GTOnline - GreenTrapOnline's User Portal	3
1. Log in to GTOnline	3
1.1 Forgot Your Password	4
1.2 Change Password	5
1.3 Status overview in GTOnline	6
1.4 Main Functions in GTOnline	7
1.5 Change Language Settings	7
 2. Main Function - Settings 2.1 Settings -> Customer Settings 2.1.1 Settings - Create new Customer 2.1.2 Settings - Create new Installation 2.2 Settings -> Installation Settings 2.A GTConnects - Add GTConnect 2.B Control Points - Create Control Points 2.B.1 Control Points - Control Points ID 2.B.2 Control Points - Upload Images 2.C Alarm Settings 2.D Floor Plans 2.D.1 Upload floorplan from Device status list 2.E Reset all notifications 2.3 Settings ->Users 2.3.1 User Settings - Add installation access 2.3.2 User Settings - Delete user account 	8 8 9 9 11 12 13 15 16 17 18 20 21 22 23 24
3. Main Function - Status	25
3.1 Status - Device Status	25
3.2 Status - Control Point Inspection(s)	26
3.3 Set installation in Service Mode	27
4. Main Function - Analysis	28
4.1 Analysis -> Inspection Analysis	28
4.2 Analysis -> Reporting	29




GTOnline - GreenTrapOnline's User Portal

GTOnline is the backoffice tool to monitor and control all the GTO equipped installations. This includes configuration, grant of access to technicians or end-users, generate reports and create/prepare new installations.

The GTO portal is built on Microsoft BI cloud solution, which guarantees you a safe and reliable system.

You can enter GTOnline from GTO's www page: **www.greentraponline.dk** or by using this link: <u>https://www.greentrap.com/GTOnline</u>

Please contact your GTO supplier or GTO super user for login to the portal.

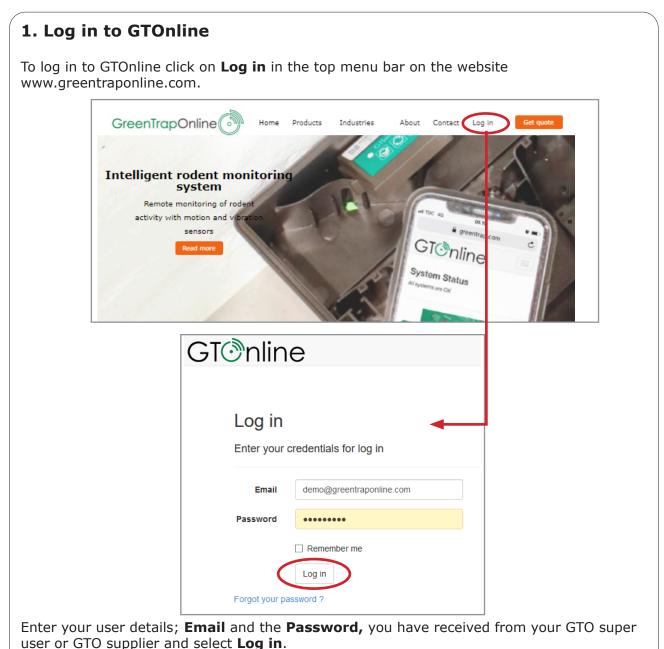



1.1 Forgot Your Password

Click on the link **Forgot your password?** in the 'Log in-window'.

Key in the email address in the text box **Email (1)** and press **Send (2)**

GTIIne		
	Log in	
	-	credentials for log in
	Liner your c	
	Email	demo@greentraponline.dk
	Password	
		Remember me
		Log in
	Forgot your pa	ssword ?
GTⓒnli	ne	
_		
-	l ot your pas our e-mail	sword ?
	Email demo	
	Send	2
		-

The server will send an automatically generated email with a new password to the specified email address and this password can be used to access GTOnline.

Note: If you do not receive the email, please check the spamfilter.

GTOnline User Guide - June 2020

4



1.2 Change Password

To change your password, click on the link with your **email address** at the top menu bar.

GTOnline Status Settings- Analysis- Contact	glogtfestaccount com , Log out
Welcome to GTOnline!	
Land to the second of the sec	Installation Description Per Reensu Testinstalistics Berrice XX Wareboars Service
The 'Change your account settings-window', select C GTonline Home Status Analysis Settings Contact	Change your password.
Change your account settings Passwold: [Change your password]	
Current Password New Password Confirm Password Change Password Offirm Password	 Enter a new password. Please note it has to consist of at least 8 characters including capital letter, 1 digit and 1 spe cial character (!*#%). Confirm password. Select Change Password to save your changes.


GreenTrapOnline

1.3 Status overview in GTOnline


When you log in to GTOnline the startpage will show an overview of all your installations both on a map and in a list to the right.

You can see where the installations are located on the map, check their status (see section 3. Main function - Status) and set a specific installation in Service mode (see section 3.3 Set installation in Service mode).

You can scroll around the map and zoom in and out. If you click on a installation icon on the map, you get information about the name and location of the installation. If you click on the name of the installation you will go to 'Device status list' for this specific installation. If you click on an icon in the installation list to the right you will also go to 'Device status list' for this specific installation.

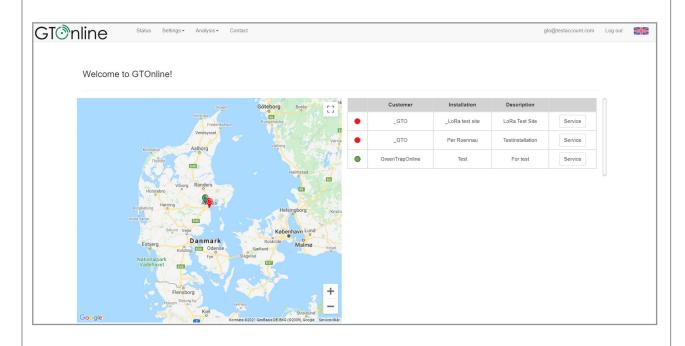



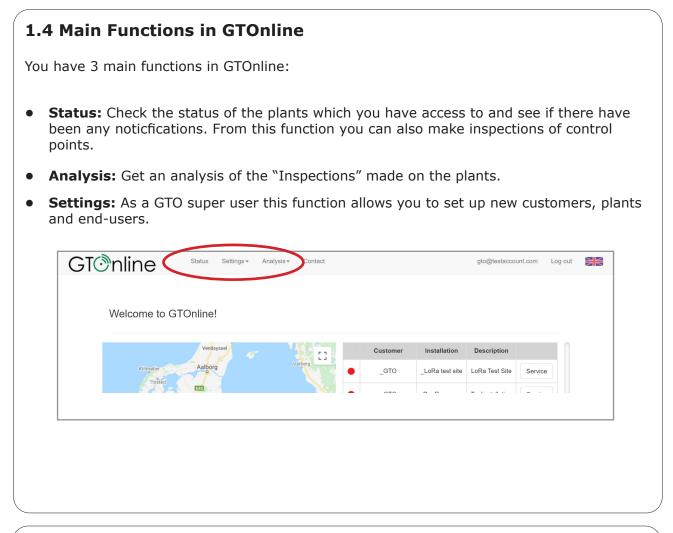

1.5 Change Language Settings

You can change the default language English, to your prefered language i GTOnline.

- 1. Select the **flag** at the top menu bar.
- 2. Select your prefered language by clicking on the flag.

Welcome to GTOnline!							
		Göteborg Borks []	Customer	Installation	Description		
	Frederikshave	Kongsbacka		_LoRa test site	LoRa Test Site	Service	
Kitzaber	Aalborg	Vatient	_GTO	Per Roennau	Testinitallation	Service	
Piller S			GreenTrapOnline	Test	For test	Service	
Holssebro Viborg	Randers						
Registing Herning	See.	Helsingborg Kriste					
	OTC		attings - Analysis -	Developed		1	1
	GO	nline status s	attings + Analysis + I	Contact			
	1						
		d					
		ø					
		¢					
			Dansk				
		ø	Dansk English				
	(.						
	(:		English				
			English Français				




2. Main Function - Settings

Settings are only accessible by the Super User/Administrator and/or your back office manager.

GT Inline Status	Settings - Analysis - Contact
	Customer
	Installation
Welcome to GTOnline!	Users

- **Customer:** Create a new or edit existing customer.
- **Installations:** Create or edit existing installation. Set up Control points and GTConnect(s), upload floorplan(s) and set up alarm receivers.
- **Users:** Set-up user preferences, grant access to plants or further functionality in GTOnline.

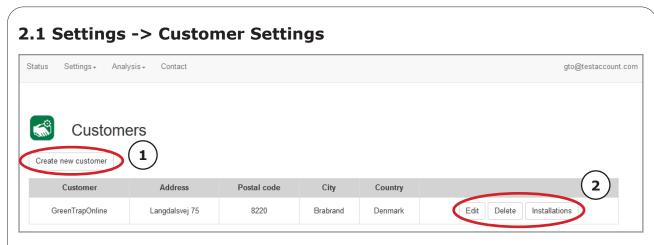

- 1. Create a new customer.
- 2. Edit information, Delete or see/create Installations for the specific customer.



2.1.1 Settings - Create new customer

To create a new customer go to **Setting -> Customer Settings -> Create New Customer**. Fill in the form, notice that all fields are required.

Cre	ate new customer
Customer	
Address	
Postal code	Company details.
City	
Country	
Contact name	
Contact phone	Contact details of the person in your — organisation who is the administrator/
Contact e-mail	super user.
	Save
Remember to press Save up	oon finishing.

2.1.2 Settings - Create new installation

To create a new installation belonging to a specific customer go to, **Settings -> Customer Settings -> Installations**.

eate new customer					
Customer	Address	Postal code	City	Country	
GreenTrapOnline	Lanadalavai 75	8220	Brabrand	Denmark	Edit Delete Installations
Insta	Langdalsvej 75		Online)		
reate new installation	tions (G	reenTrap			
	Hotions (G			∋ zone	2



Selecting Create new inst	allation opens the following window. Complete the form:
😰 Cre	eate new installation
Customer	GreenTrapOnline
Installation	GTO Test
Description	For test
Address	Langdalsvej 75
Postal code	8220
City	Brabrand
Country	Denmark
Time zone	(UTC+01:00) Brussels, Copenhagen, Madrid, v
	Save

- **Customer** is default based on the customer, you are creating the installation for.
- **Installation:** Type in the name of the new installation.
- **Description:** Type in the type of installation e.g. a factory.
- Adress/Postal code/City Country: Type in the adress of the installation.
- **Time Zone:** Select the correct timezone of the installation.



2.2 Settings -> Installation Settings


Edit settings or Delete the installations you have access to.

Create new installation	```	GreenTrap	Online)	
Customer	Installation	Description	Time zone	
GreenTrapOnline	Test	For test	Romance Standard Time	Edit Delete

In **Edit** installation, you get the following options; which will be described seperately in 3 sections.

😰 Edit i	installation	
Customer	GreenTrapOnline	
Installation	GTO Test	
Description	For test	
Address	Langdalsvej 75	
Postal code	8220	
City	Brabrand	
Country	Denmark	
Time zone	(UTC+01:00) Brussels, Copenhagen, Madrid, Paris	
	Save	
Ceture day		
Set up dev		
((₁))	GTConnects Central points Floor plans C	
\odot	Control points	
	Floor plans	
ل ک	Alarm settings	
Delete sen	nsor history	
Re	Reset all notifications	
A GTConnects: Set-up or e	edit GTConnects, section 2.A.	
B Control Points: Set-up o	or edit control points, section 2.B.	
C Floor Plans: Upload floor components are located, s	r plans of on-site installation to show where hardware section 2.C.	
D Alarm Settings: Set-up e and server issues, section	email accounts for receiving notifications from Control Poin n 2.D.	nts
E Reset all notifications: I installation, section 2.E.	Permanently delete all notifications and inspections for the	e



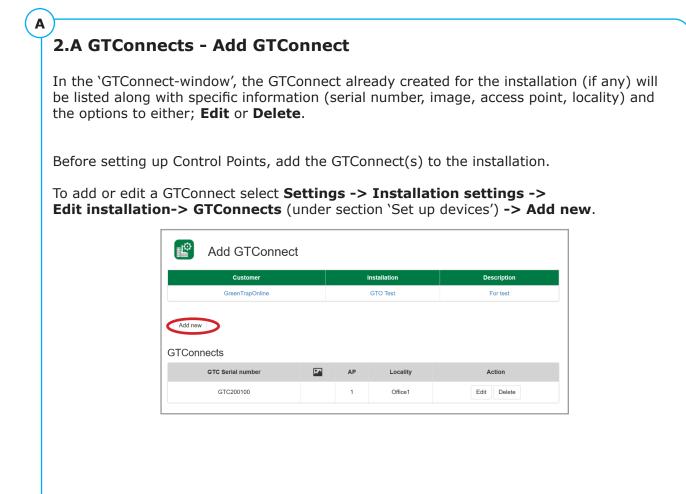



В

2.B Control Points - Create Control Points

In the 'Control Points-window', the control points already created for the plant (if any) will be listed along with specific information and the options to either; **Edit**, **Copy** or **Delete**.

Copy is an easy way to create a new control point based on identical information and in this case, you only have to edit the control point ID and number; CP, which is described on the following page.

Before making an installation on-site, the intended number of GTSensors for the plant, have to be set up in GTOnline.

To create or edit a control point select **Settings -> Plant Settings ->Edit -> Control Point** (under section 'Set up devices') **-> Add Control Point**.

Origination Sensor is balance Note a larme Note larme Note a larme <		ireenTrapOnline			GTO Test			For test						
Add control point are about to add/edit: Customer Interface GreenTrapOnline GTO Test Sensor settings Sensor ID Control point Image: Sensor ID Sensor ID Sensor ID Sensor ID Image: Sensor ID Sensor ID Sensor ID: Type in ID of the sensor. Sensor: Choose the correct sensor to Sensor: Choose the station, that the sor is placed in. Active Image: Sensor ID Floor plan Image: Sensor ID Floor plan Image: Sensor ID Sensor Settings Image: Sensor ID Locality: Specify where the control plane	CP Building					Report alarms	Max. alam		Delete					
Add control point are about to add/edit: Control Point: Type in an optional normalization Sensor settings Sensor ID: Type in ID of the sensor. Sensor in D Sensor in D Sensor: Choose the correct sensor to sor is placed in Locality Sensor is placed in Active: Make sure that it's ticked off Hore plan Specify where the control point Specify where the control point														
Add control point are about to add/edit: Control Point: Type in an optional normalization Sensor settings Sensor ID: Type in ID of the sensor. Sensor in D Sensor in D Sensor: Choose the correct sensor to sor is placed in Locality Sensor is placed in Active: Make sure that it's ticked off Hore plan Specify where the control point Specify where the control point			•											
GreenTrapOnline GTO Test Fortest Sensor settings Control Point: Type in an optional model Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Sensor: Choose the correct sensor to sensor to sensor to sensor. Sensor GTO Sensor 3.0 Sensor: Choose the correct sensor to sensor to sensor to sensor. Location settings Station: Choose the station, that the sor is placed in. Active: Make sure that it's ticked off Locality: Specify where the control point is sensor.	Add contro	ol point										ontrol	point	γοι
Control point 2 Image: Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor ID: Type in ID of the sensor. Sensor: Choose the correct sensor the sensor. Sensor ID: Type in ID of the sensor. Sensor: Choose the correct sensor the sensor. Sensor ID: Type in ID of the sensor. Sensor: Choose the correct sensor the sensor. Locating Sensor: Choose the station, that the ser is placed in. Locating Sensor: Make sure that it's ticked off Inside Sensor: Specify where the control placed in.		ine			D			Control	Point:	Тур	e in a	in opt	ional n	um
Control point 2 Sensor ID Sensor ID<		Sensor setti	ngs					Sensor	ID: Typ	pe in	ID o	f the s	sensor.	
Sensor: Choose the correct sensor to Sensor: Choose the correct sensor to Station: Snap Trap installed Active: Installed Location settings Location settings Floor plan				۲										
Station Snap Trap installed Active Station: Choose the station, that the sor is placed in. Location settings Active: Make sure that it's ticked off Inside Inside Floor plan Image: Specify where the control plan			150r 3 0	~				Sensor:	Choose	e the	e corr	ect se	ensor t	уре
Active Station: Choose the station, that the sor is placed in. Locality Froor plan Active: Make sure that it's ticked off Locality: Specify where the control plan								<u>.</u>						
Location settings Locatiny Locatiny Floor plan Locatiny Locatiny Locatiny Locatity: Specify where the control plan	٨	active 🗸									e sta	tion, t	nat the	e se
Locality Active: Make sure that it's ticked off Inside Image: Control of the		Location set	tings						iceu iii.	•				
Floor plan Locality: Specify where the control plan	Lo		•					Active:	Make si	ure	that i	t's ticl	ked off	
		Inside		~										
placed inside or outside.	Floor	plan		Y				is located	d. You d	can a	also s			
Floorplan: choose (if any) floorplan, show where CP is placed physically.														to



Alarm	settings		Report alarms: Make sure that it's ticked off to receive alarms.
Report alarms			Max. alarms: Select the maximum amount of email alarms you wish to
Max. alarms Report motion alarm			receive from this specific CP between resets. GTO recommend 1 max. alarm.
Sensitivity motion [1-5] Report vibration alarm	₃ ♥	8	Report motion alarm: Tick off if you wish to receive alarms, when only
	·		motion is detected.
Sensitivity vibration [1-5]	4 Save	Cancel	Report vibration alarm: Tick off if you wish to receive alarms, when only vibration is detected.
Sensitivity moti	on/Sensitivity y	vibration: V	ou can set the sensitivity of the motion and
vibration sensor a Sensitivity can ra Determining the Motion sensitivity	and thereby adjusting nge from 1-5, 1 b sensitivity of the C e.g depends on v y can be adequate	t when a no eing the low GTSensor 3.0 vhether the	ou can set the sensitivity of the motion and tification/alarm is sent. west and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l	and thereby adjusting nge from 1-5, 1 b sensitivity of the C e.g depends on v y can be adequate	t when a no eing the low GTSensor 3.0 vhether the	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l	and thereby adjusting nge from 1-5, 1 b sensitivity of the C e.g depends on v y can be adequate by.	t when a no eing the low GTSensor 3.0 vhether the	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l	and thereby adjusting from 1-5, 1 b sensitivity of the C e.g depends on v y can be adequate by. Alarm settings	t when a no eing the low GTSensor 3.0 vhether the	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck he sensor all ocated somewhere where truck
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l Report alarr	and thereby adjusting from 1-5, 1 b sensitivity of the C e.g depends on v y can be adequate by. Alarm settings	t when a no eing the low GTSensor 3.0 vhether the	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l Report alarr Max. alarr	Alarm settings 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2	t when a no eing the low GTSensor 3.0 vhether the	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck Motion and vibration strength needed to activate sensor Sensitivity
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l Report alarr Report motion alar Sensitivity moti	Alarm settings 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2	t when a no eing the low GTSensor 3.0 vhether the e set low if t	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck Motion and vibration strength needed to activate sensor
vibration sensor a Sensitivity can ra Determining the Motion sensitivity vibration sensivit are often driven l Report alarr Max. alarr Report motion ala Sensitivity moti [1 Report vibrati	Alarm settings 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2	t when a no eing the low GTSensor 3.0 vhether the e set low if t	tification/alarm is sent. vest and 5 the highest sensitivity. 0 depends on the enviroment. sensor is placed inside or outside and he sensor is located somewhere where truck Motion and vibration strength needed to activate sensor Sensitivity



В

2.B.1 Control Points - Control Points ID

All GTO devices have an unique ID, which is used for recognition when data (alarm/notifications) is sent from devices to the GTO server.

GTSensor ID-label



The **GTSensor** has a label, that states the type of sensor and its unique ID. The ID must be typed into GTOnline. In this case the ID is: **124507**.

It is always recommendable to have added the GTSensors for a plant ahead of on-site installation. If extra GTSensors have to be added while on-site, type in the sensor ID for the given Control point before switching it on to make sure you can see that the sensor is online and reporting to the system.

GTConnect ID-label

It is recommended to enter the ID of the **GTConnect** before setting up Control points - see section **2.A GTConnects - Add GTConnect**.



Edit control po	int		1. Select Pictures.
Customer GreenTrapOnline	Installation GTO Test	Description For test	2. In the next window, 'Control P Pictures', select Upload New
Sen Control point	1 e		ture.
Sensor ID	202011		3. Click Browse to upload a pict
Sensor	GTO Sensor 3.0 🗸		stored on your computer, lapto mobile etc.
Station	Snap Trap installed 🗸		
Active	\checkmark		This will open the default uplo
	ation settings		folder application from your de and the next steps will depend
Locality	Ground floor		this.
Floor plan	Inside ~		Contact your local company IT
Alar	rm settings		administrator if in doubt of ho
Report alarms	\checkmark		use the application.
Max. alarms	1		4. Upon finding the image file,
Report motion alarm			remember to click Upload .
Report vibration alarm			
	Pictures	Save	
Contro	ol point pictures		
Upload new picture	<u> </u>		
	2 er	Installation	Control point
Green	TrapOnline	GTO Test	1
•			
3			
	ntrol point picture		
wse 3	(Only PNG file format is allowed)		
load picture			
	Installa	ation Contr	rol point
Customer GreenTrapOnline			1



2.C Alarm Settings

С

GTOnline User Guide - June 2020

You can set up users/email accounts, which should receive notifications/alarms.

Go to **Settings -> Installations -> Edit -> Alarm Settings** (under section `Set up devices').


Email accounts already set to receive notifications are listed here. For existing accounts, you have the option to see **Details**, **Edit** or **Delete** the account.

To set up a new alarm receiver (user) select **Add new**.

	Customer	Title		Description		
	GreenTrapOnline	Tes		For test		
Add new Alarm type	Email of recipient	Language	Postpone alarms			
Control point activity	gto@testaccount.com	English (United Kingdom)		Details Edit Delete		
	Back					
	oint activity ~			makes a PIR/vibrat		
	United Kingdom)		• Connectiv	ity issues if a problue network e.g. if the		
Postpone alarms				is no longer online.		
Disabled		be treated as the next day.		il: The email accour n will be sent to.		
Advanced settings	pecified 'to' is earlier than 'from', 'to' will I					
Advanced settings Note! If the s	pecified 'to' is earlier than 'from', 'to' will l		Languaga, Th	a languaga yau wich		
Advanced settings	oecified 'to' is earlier than 'from', 'to' will l		Language: Th recevie the ala	e language you wisł rm in.		

17



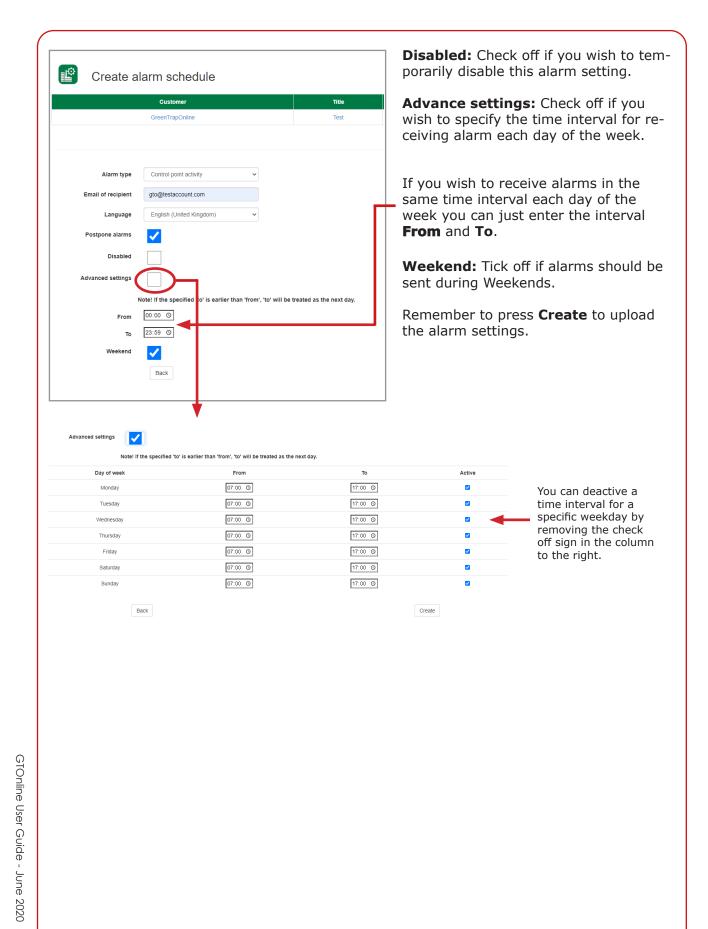



2.C Floor Plans

D

You can upload one or more floorplans of the on-site installation in GTOnline, so you can get a quick overview of where the sensors are located physically. The floorplan will be shown in the 'Device status list".

Go to **Settings -> Installation -> Edit -> Floor Plans** (under section 'Set up devices').

Upload new	Floor plans					
	Customer	I	nstallation	Descr	iption	
	GreenTrapOnline		GTO Test	For test		
Browse	Floor plans 2 No file selected (Only PN 3 floor plan	G/JPG file for	mat is allowed) Installa	ti on		escription
	GreenTrapOnline		GTO 1	est		For test

1. Select Upload new floor plan.

2. Click **Browse** to upload a png or jpg image stored on your computer, laptop, mobile etc.

This will open the default upload folder application from your device and the next steps will depend on this.

Contact your local campany IT administrator if in doubt on how to use the application.

3. Upon finding the image file, remember to click Upload floor plan.

NOTE:

You can upload several of floor plans in case you want to divide your plant into stories, buildings etc.

Supported file format is PNG and JPG. Maximum size is 4 MB.



D			
Ĭ	2.D.1 Upload floorplan from	Device status list	
	You can also add a floorplan to an ins Go to Status -> Installation status		tatus list.
	Device status		
	Customer	Installation	Description
	GreenTrapOnline	GTO Test	For test
	Upload new floor plan Floor clans 2 Gennemse Ingen fil valgt. (Only PNG/JPG file Upload floor plan 3	format is allowed)	
	Customer	Installation	Description
	GreenTrapOnline	GTO Test	For test

1. Select Upload new floor plan.

2. Click **Browse** to upload a png or jpg image stored on your computer, laptop, mobile etc.

This will open the default upload folder application from your device.

3. Upon finding the image file, remember to click Upload floor plan.



	f it is a demo installa		s and inspec	tions for an		tallation pe	ermenant
-				ant all mat	Gastiana	(under ee	ati a la
	: Settings -> Insta te sensor history'.	allations - 2	> Ealt -> Re	eset all noti	ncations	(under se	CTION
	Edit installation						
Customer	GreenTrapOnline						
Installation	GTO Test						
Description	For test						
Address	Langdalsvej 75						
Postal code	8220						
City	Brabrand						
Country	Denmark						
Time zone	(UTC+01:00) Brussels, Copenhagen, Madrid, Paris			~			
	Control points Floor plans						
	GTConnects Control points Floor plans Alarm settings ete sensor history						
	GTConnects Control points Floor plans Alarm settings ete sensor history	-					
	GTConnects Control points Floor plans Alarm settings ete sensor history	s and inspect	lation	Description For test			
	GTConnects Control points Floor plans Aarm settings tete sensor history Reset all notifications Reset all notifications	vant to delete all notification Il pending notifications as the status section or the a	lation Test ons and inspections for this well as all previously inspec nalysis section of the websi	For test installation? ted			

tings. When you click 'Ok' all pending notifications and previously inspections will no longer appear in the status section or the analysis section on the website.



GT⊘nline	Home	Status Analysis	Settings	Contact		
	Create new user			Type	in relevant us	er information:
User Settings Create	new user				Name/Last	
First name John					ription (work	
Last name Jonnson Description Service Specialist E-mail test@greentraponlii	ne.dk			Ema		ne user wants to
Administrator				es th Refer of us ences Pass Choo has t	at apply (can a to the table b ers and other s. word/Confir se a password o consist of at	Tick off any box- always be edited) elow to see types optional prefer- m password - please note it least 8 character etter, 1 digit and
					ecial character	
	Status: • Plants	Create and delete:	Reset Inspect	ions:	Set Service Mode:	Edit installation:
	Analysis: • Inspections • Default for all user types	 Customers Plants Users Administrator only 	• Contro Points	ol	 Activiate Deactivate 	 Control Points Alarm Settings Upload Floor Plan
Default user account						
Administrator/				/		
Super User						



User Se	^{ttings} Use	ers			
Create new use					
First name	Last name	Descriptio		E-mail	
John	Johnson	Service Sp	ecialist	test@greentraponline.dk	Edit Delete
		User Settings	Edit user	-	
		Last name	Johnson		
		Description	Service Specialist		
		E-mail	test@greentraponlin	ne.dk	
		Administrator			
		Inspections			
		Set service mode			
		Edit installation			
			Save		
			Installation access)	
ready acce add furthe	llation acce sible plants a er plants,	are listed.			
lect Add i	nstallation a	access.			
User Setting	nstalla	tion acce	ess		
Name			E-mail		
Name					



In the 'Add Plant Access-window', customers/plants are listed.

Tick off the plant(s) (1), you want to add and click **Update Plant access (2)**.

	User Settings Add Plant Acc	cess	
Name		Email	
Poul Ber	ndly	poul@bendly.com	
Update	Plant Access 2	Plant	Description
	$\overline{}$		
	1 eenTrapOnline	Demo installation	Factory
	1 GTO demo installation	Control Box 105	Factory Test @ GTO HQ

to lleer (ays delete a u	click Doloto		
to User :	Settings and	click Delete .		
Create new use		ſS		
First name	Last name	Description	E-mail	
John	Johnson	Service Specialist	test@greentraponline.dk	Edit Delete
e lete . e user is r	now deleted a		User Settings	Delete user
e lete . e user is r tomaticall		nd you will	E-mail First name	Delete user test@greentraponline.dk John Johnson



3. Main	Function - Status	
Reset insp	ves a quick overview of all the installation you have access to. Futhermore y spections for control points and activate Service mode (e.g. during inspections are cleaned).	
	GTOnline Status Settings - Analysis - Contact	
	Welcome to GTOnline!	
Go to Stat	tus -> Installation status	

In this window all your installation are listed and the *status icon* gives a live status update:

Everything is ok, no action needed.

- 1 or more notifications that requires action. Press the red icon to go to installation.
- 1 or more Control Points are offline, press the grey icon to view details
- Installation is prepared in GTOnline but the GTConnect has never been active.

service mode is activated.

3.1 Status - Device Status

When clicking a *status icon*, you will see a list of all the devices for the specific plant:

 \bigcirc Everything is OK.

Ontrol Point activity, 1 or more notifications.

Or the column **Last seen** for details.

Plant Status Device Status	s
----------------------------	---

Custom	er		Plant	Plant				Description				
_GTO			_LoRa test site	_LoRa test site								
Device	СР	Building	Floor	Locality	Sensor	Station	Batt.	SignalStrength	LastSeen			
٢	1	Office	Ground floor	123502	GTO Sensor 3.0	Snap Trap installed			2019-10-08 14:27:45	Inspection		
Ò	3	Office	First floor	123101	GTO Sensor 3.0	Snap Trap installed			2019-08-01 13:03:17	Inspection		
٢	4	Office	Ground floor	123102	GTO Sensor 3.0	Snap Trap installed			2019-10-08 13:39:38	Inspection		
Ò	5	Office	Ground floor	123103 -	GTO Sensor 3.0	Snap Trap			2019-10-08	Inspection		




3.2 Status - Control Point Inspection(s)

To make an Inspection for a specific Control Point go to: **Status -> Installation status -> Device status ->** select **Inspection**

Custom	er		Plant					Description			
_gto			_LoRa test site	;							
Device	CP	Building	Floor	Locality	Sensor	Station	Batt.	SignalStrength	LastSeen		
٢	1	Office	Ground floor	123502	GTO Sensor 3.0	Snap Trap installed	 p		2019-10-08 14:27:45	Inspection	
Ø	3	Office	First floor	123101	GTO Sensor 3.0	Snap Trap installed			2019-08-01 13:03:17	Inspection	
٢	4	Office	Ground floor	123102	GTO Sensor 3.0	Snap Trap installed	 p		2019-10-08 13:39:38	Inspection	
				Customer Installation Description	ant Status	Control GreenTra Testinstall For test	pOnline	t inspectio	on		
				Customer Installation		GreenTra Testinstall	pOnline ation e 1	t inspecti	on		he correct cause
				Customer Installation Description Control poil Building Floor Locality		GreenTra Testinstall For test 3 Warehous Ground fit By door	e 1	t inspecti	on	and acti Insert a	on from the list. comment why th
		ssible to uplo		Customer Installation Description Control poil Building Floor		GreenTra Testinstall For test 3 Warehous Ground fit	pOnline ation e 1 bor sor 3.0	t inspecti	on	and acti	on from the list. comment why th
		ssible to uplo the inspecti		Etites I Customer Installation Description Control poil Building Floor Locality Sensor		GreenTra Testinstall For test 3 Warehous Ground flu By door GTO Ser	pOnline ation e 1 bor sor 3.0	t inspecti	on	and acti Insert a	on from the list. comment why th
ictur	e from		on.	Etites I Customer Installation Description Control poi Building Floor Locality Sensor Station		GreenTra Testinstall For test 3 Warehous Ground flu By door GTO Sens Snap Trap	oOnline ation e 1 bor sor 3.0	t inspecti	on	and acti Insert a	on from the list. comment why th done.

When making an inspection for a control point select "*Cause"* and "*Action"*. You can also type in a comment as to why this action is done. It is also possible to upload a picture from the inspection. Remember to click "*Save"*.



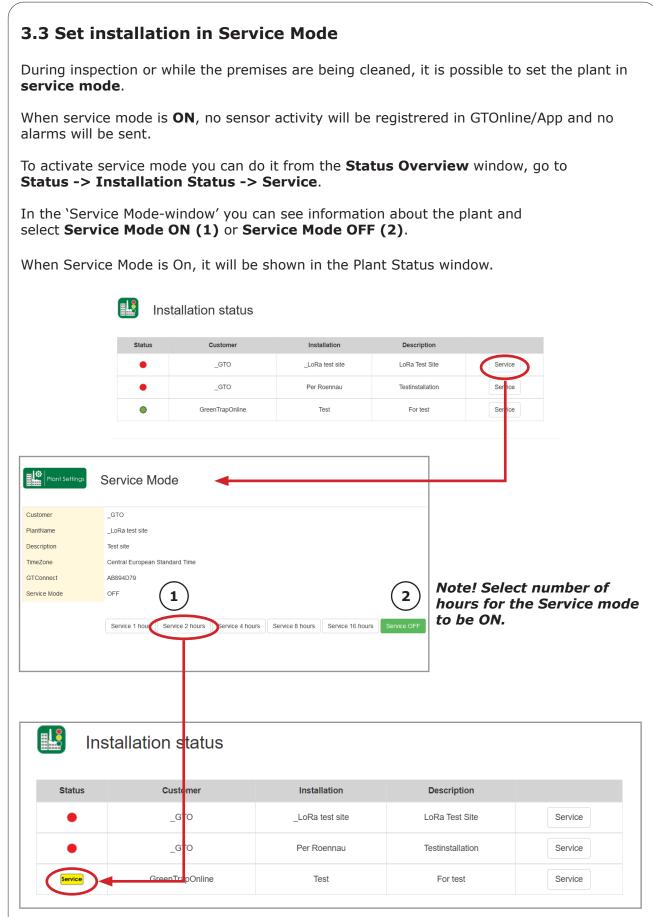



4. Main Funct	ion - Analysis						
With this main fun	ction, you can view li	sts of re	ported	data.			
	GTInline	Status	Settings -	Analysis -	Contact		
				Inspection			
	Welcome to GT	Online!		Reporting			
Inspection Ana List of the inspection Plants, Control Po	tions made on the		Co	porting ntrol Poi port to E	nt Activity	Chart and export	• • • • • • • • • • • • • • • • • • • •

4.1 Analysis -> Inspection Analysis

Go to **Analysis -> Inspection Analysis** to view a list of plants, where inspections have been made and **Select** the plant for which, you would like to view further details:

Inspection Analysis	Plant Inspe	ections						
Customer		Plant			Descriptio	'n		
_gto		_LoRa test site			Test site			Select
	Control Po	into Mith	Increativ					ł
Analysis	Control PO		Пітэресію	5115				
Customer		Plant				Description		
_GTO		_LoRa test site				Test site		
Device CP	Building		Floor	Locality	Ser	ISOF	Station	Inspections

	Show (1)
Image: Second system Office Ground floor 123103 GTO Sensor 3.0 Snap Trap installed State	Show (1)

In the 'Control Point With Inspections-window', you can see how many inspections have been made for the listed control points, eg. CP 4 has had 1 inspections. If a control point is not listed, it means that no inspections have been made so far.



o view further deta	ails, click Show :				
Manalysis Cor	ntrol Point Inspections	;			
Customer	Plant		Descrip	tion	
_GTO	_LoRa test site		Test site		
CP Created	Cause	Action	Comment	Inspector	

If pictures were uploaded during an inspection, you can click the **camera icon** to view the images.

4.2 Analysis -> Reporting

Reporting is a tool for making intelligent and user-friendly data analysis and audit reports.

Go to **Analysis -> Reporting** to view a list of plants where you can generate a report over Control Point Activity.

Customer Plant Description	
_GTO _LoRa test site Test site	

Select a specific time period (1) to generate a report. Go to **Analysis -> Reporting -> Control Point Activity.** Click Generate Report (2).

	Control Point Activitity Char	
ustomer	Plant	Description
GTO	_LoRa test site	Test site
2019-10-10 (2) Generate	yyyy-mm-dd (ex. 2018-02-28) Report	



The Control Point Activity Chart shows Control Points where there has been notifications and how many over the specified timeperiod.

To export the data from the chart to Excel for more analysis processing click the button $\ensuremath{\textbf{Excel}}$

